











Programming codes (Firmware version 21.18)

OSI-3500 2D

 <p>Convert to UPC-A bar code</p>	 <p>Not converted to UPC-A</p>
Expand UPC-E to UPC-A	Unexpanded UPC-E to UPC-A
 <p>Transfer check character</p>	 <p>Do not transfer check character</p>
Add UPC-E check digit	Remove UPC-E check digit
 <p>Transfer system character</p>	 <p>Do not transfer system character</p>
Add UPC-E lead digit	Remove UPC-E lead digit
 <p>Transfer check character</p>	 <p>Do not transfer check character</p>
Add UPC-A check digit	Remove UPC-A check digit
 <p>Transfer system character “0”</p>	 <p>Do not transfer system character “0”</p>
Add UPC-A lead digit	Remove UPC-A lead digit